


# Sail Sign Universal Assembly Instruction Sheet

Products these steps apply to:

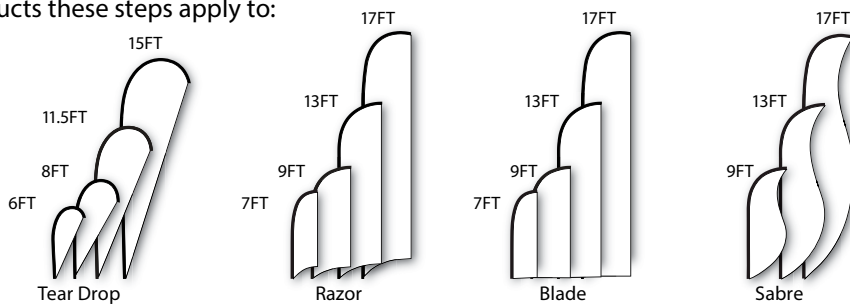


**NOTE:** Keep product clear from trees, poles, buildings, or any other obstruction as it will cause premature wear.

## Product Parts

- 1 - Graphic
- 2 - Poles (as shown)
- 3 - 190712 Elastic Cord Kit includes: A-Elastic Cord, B-Ring, C-Clip

## Optional Parts

- 4 - Base (options a/b/c)
  - a. Spike
  - a2. Ground Anchor
  - b. Scissor
  - c. Indoor 3-leg
- 5 - Water Ballast (round/square)

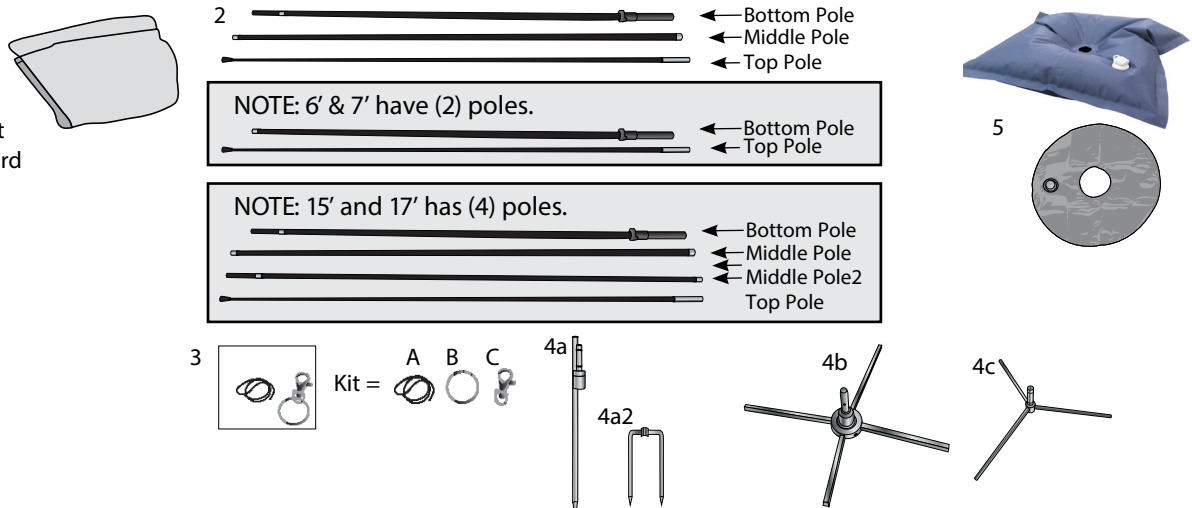

**NOTE:** 6' & 7' have (2) poles. ← Bottom Pole, ← Middle Pole, ← Top Pole

**NOTE:** 15' and 17' has (4) poles. ← Bottom Pole, ← Middle Pole, ← Middle Pole2, ← Top Pole


**NOTE:** Ground Anchor is only included in select Double-Sided Sail Sign Spike Kits. Streamline Double Sided 14.5', 15' & 17'. Premium Double Sided 14.5', 15' & 17'.

## Display Set-Up

### Step 1

Begin by removing the parts from the carry case and placing them on a clean flat surface.

Assemble the Poles (2) together by inserting the Bottom Pole into the Middle Pole.

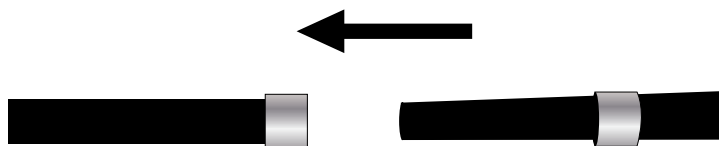

### Step 2

Insert the Top Pole into the Middle Pole. **NOTE:** for 15' and/or 17' Sail Signs you will have 2 Middle Poles to insert together before inserting the Top Pole. 6' & 7' are one bottom pole & one top pole.




### Step 3

Carefully insert the top end of the assembled Poles (2) into the pole pocket of the Fabric Graphic (1). Push the Pole (2) as far as it will go until it hits the end of the pole pocket. **DO NOT FORCEFULLY PUSH THE POLE OR IT COULD SNAP.**



### Step 4


Remove the Ring (B) from the Clip (C) on the Elastic Cord Kit (3). Connect the Ring (B) to the webbing loop on the bottom end of your Fabric Graphic Pole Pockets (1).

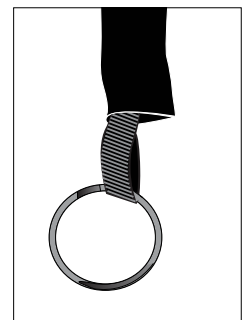

## Display Set-Up Continued...


### Step 5

Put one end of the Elastic Cord (A) through the Clip's (C) ring. Attach Clip (C) to the Ring (B)

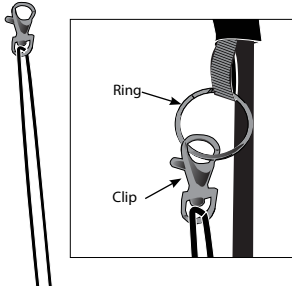


### Optional Base Spike (4a)

Hammer Spike Base (4a) into the ground at desired location. DO NOT hammer the shorter post. Insert Bottom of Pole (2) over stem on Spike Base (4a).

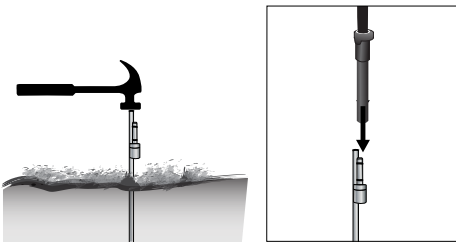


### Optional Ground Anchor (4a2)

Slide the Spike Base (4a) into the center hole in the Ground Anchor (4a2) & follow the above directions for the Spike Base (4a).

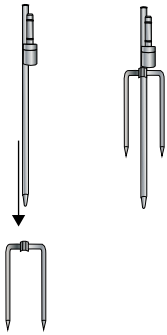


### Optional Indoor 3-Leg Scissor Base (4c)

Set up the 3 Leg Base (4c) by screwing in each leg to the center stem. Insert the bottom of the Sail Sign over the 3 Leg Base (4c) stem. This base fits only 6FT/7FT sail signs only..

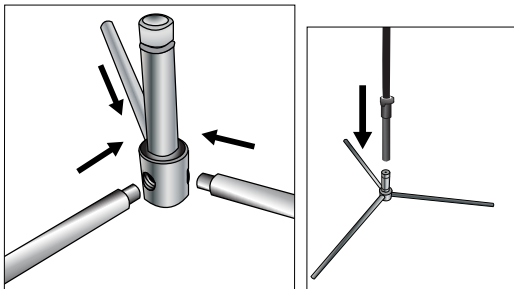


### Step 6

Using the Elastic Cord (A) pull down the Fabric Graphic on the pole to create the desired shape. Knot the end of elastic Cord (A) and secure under the plastic Pole Hook located on the base of the Bottom Pole (2)

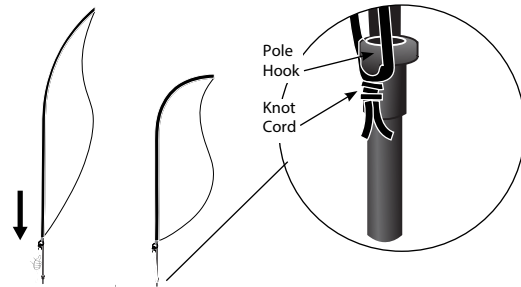

### Optional Scissor Base (4b)


Place Scissors Base (4b) at desired location by extending the legs outward. Insert the bottom of the Sail Sign over the Scissor Base (4b) stem.

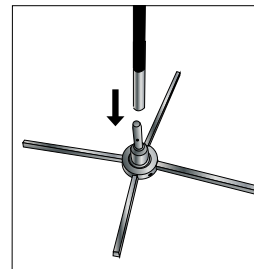

### Optional Water Ballast

Place the Water Ballast (5) over the Base (4b/4c) BEFORE attaching the Sail Sign. Fill Water Ballast (5) with water for stability.

NOTE: 15' and 17' sail signs require the square water ballasts

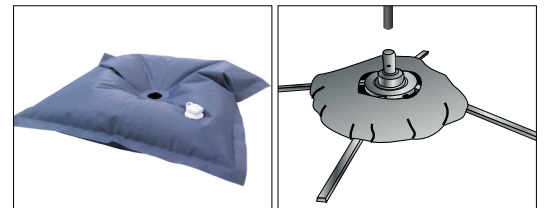

## Storage and Care

Place all product parts into Carry Case and store in a cool dry location, away from direct sunlight. To clean, wipe with damp cloth. Do not iron or dry clean the banner.

